

Recommended maintenance of TPE seal

- The TPE seal must be handled with care. Overstretching, sharp objects and poor trimming can make your seal tear.
- Do not stretch the seal more than needed. Assist yourself with a free hand when pulling the seal over your hands - both for the seal and comfort.
- If trimming the seals, use sharp scissors. Cut edges should be as smooth and straight as possible. Do not trim across trim lines.
- Use a product such as talcum, on a regular basis to minimize frictional strain on the seal and personal comfort.
- Always rinse the TPE seal with fresh water after each use.

Coating

- The TPE seal is coated to minimize friction.
- **Please note:** When stretched, the coating releases from the seals in small flakes.
- The coating will wear off over time and talcum or similar will be needed to reduce friction.

